


Seal Installation

for 10-hole Distribution Box

The Polylok 10-hole distribution box has cut guides on the inside of the box. Simply follow the 6-step instructions below to add your seals which are supplied with the box.

A cover is also supplied which can be screwed shut with the 8 x screws (included). Polylok risers fit seamlessly and are available in two heights - 150mm (6") or 300mm (12") - please ask for more information when ordering.

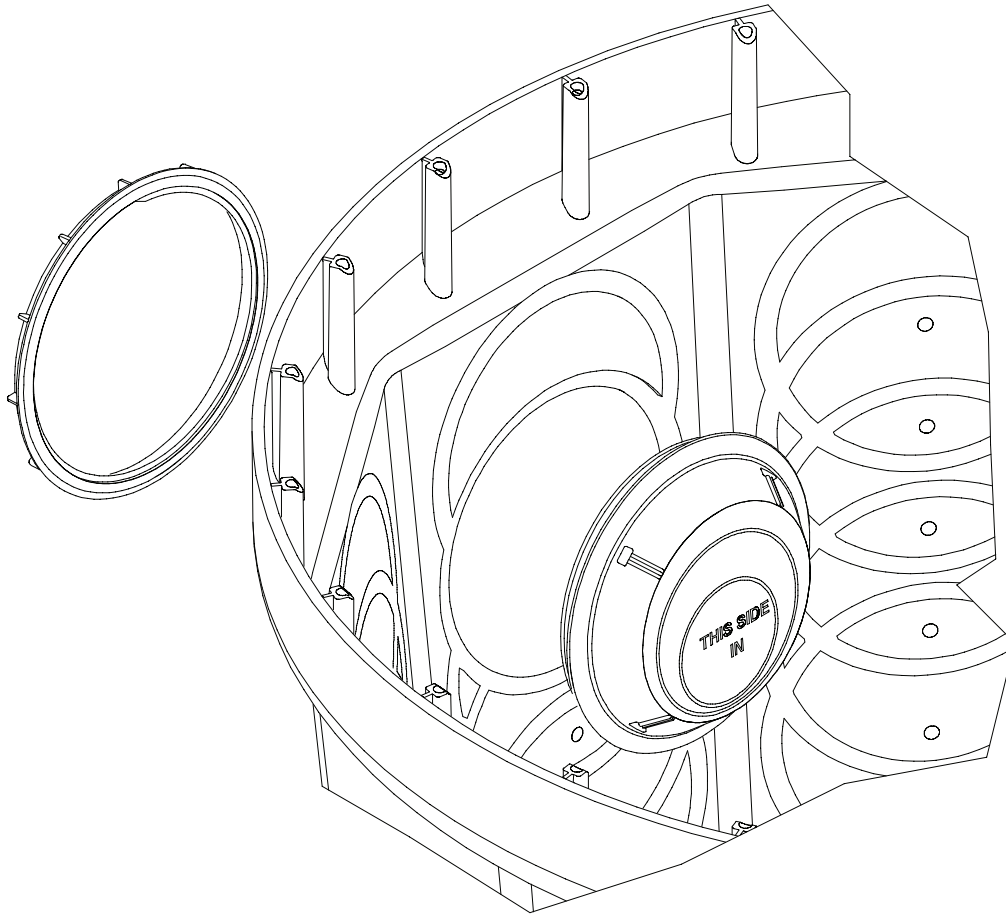

1. Drill 1/4" Pilot hole at the required location from **INSIDE** the box.
2. Using a 5 1/8" Hole Saw with a 1/4" Pilot, cut 5 1/8" hole from **OUTSIDE** the box.
3. Remove cutout slug and discard
4. Install the seal from **INSIDE** the box.
5. Screw on nut from **OUTSIDE** the box (anti-clockwise).
6. Tighten to provide watertight seal.

You can also see useful videos on how to use the seal once it has been installed, under 'resources' on the polylok.eu home page.

To find out more: email sales@polylok.eu, call us today or visit polylok.eu